

1. Check contents. Place the baseplate in required position on the grass making sure that it is far enough away from any obstructions for the rotating arm.
2. Mark the first hole with a screwdriver/marker. (Fig 1) Move the baseplate out of the way and push the anchor into the ground where marked.
3. Place the hammer cap over the anchor before hammering. (Fig 2)
4. Hammer the anchor into the ground, (Fig 3). When it is at ground level remove the cap.
5. Reposition the baseplate over the existing anchor, mark the position of the next anchor.
6. Repeat steps 2 to 5 until all three anchors have been installed into the ground.
7. Place the baseplate over the anchors to check position of anchors to the holes on the baseplate. If required, tap the anchor slightly to bring it back in line with the hole on the baseplate. (Fig 4)
8. Check baseplate to make sure it is level. (Fig 5) Knock the relevant anchors further into the ground if necessary to bring the plate level. (Remembering to use the hammer cap to avoid damaging the anchor top)
9. Insert the bolts over the baseplate into the top of the anchors, and tighten. (Fig 6)
10. Place the weight over the main pole. (Fig 7) Ensure that the PTFE sheet lines the inside of the joint casing and the washer is in the bottom before connecting the curved tube with the joint to the main pole. (Fig 8)
11. Slide the sleeve of the flag over the curved tube and down onto the main pole. (Fig 9)
12. Attach the weight onto the rope loop at the bottom of the flag. (Fig 10)
13. Mount the pole onto the baseplate ensuring the pole covers the full length of the spigot. (Make sure the arm and flag can rotate freely clear of obstacles). (Fig 11)

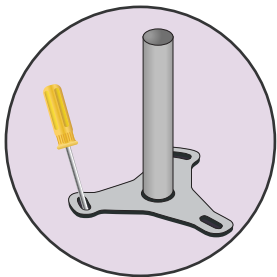


Fig 1.

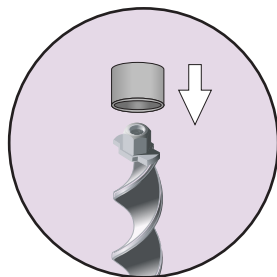


Fig 2.

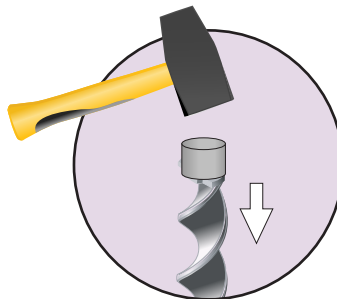


Fig 3.

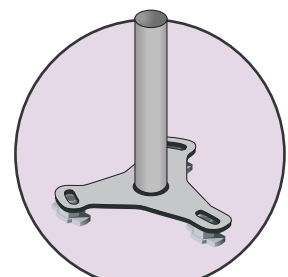


Fig 4.

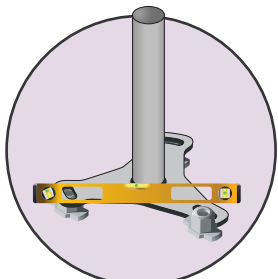


Fig 5.

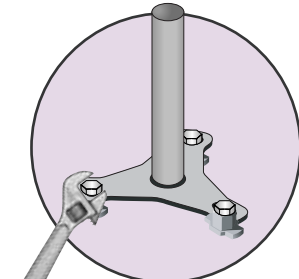


Fig 6.

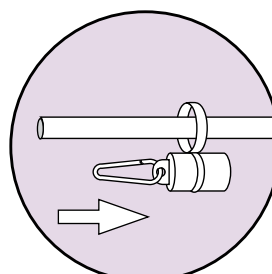


Fig 7.

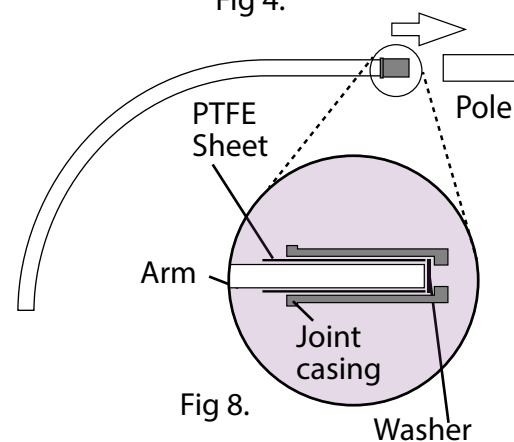


Fig 8.

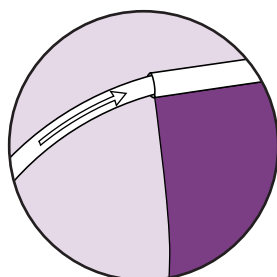


Fig 9.

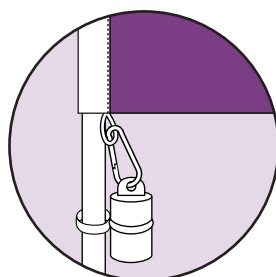


Fig 10.

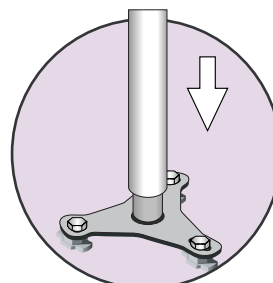



Fig 11.

FeatherPole

4.8m and 5.8m

ASSEMBLY INSTRUCTIONS

October 2018 v3

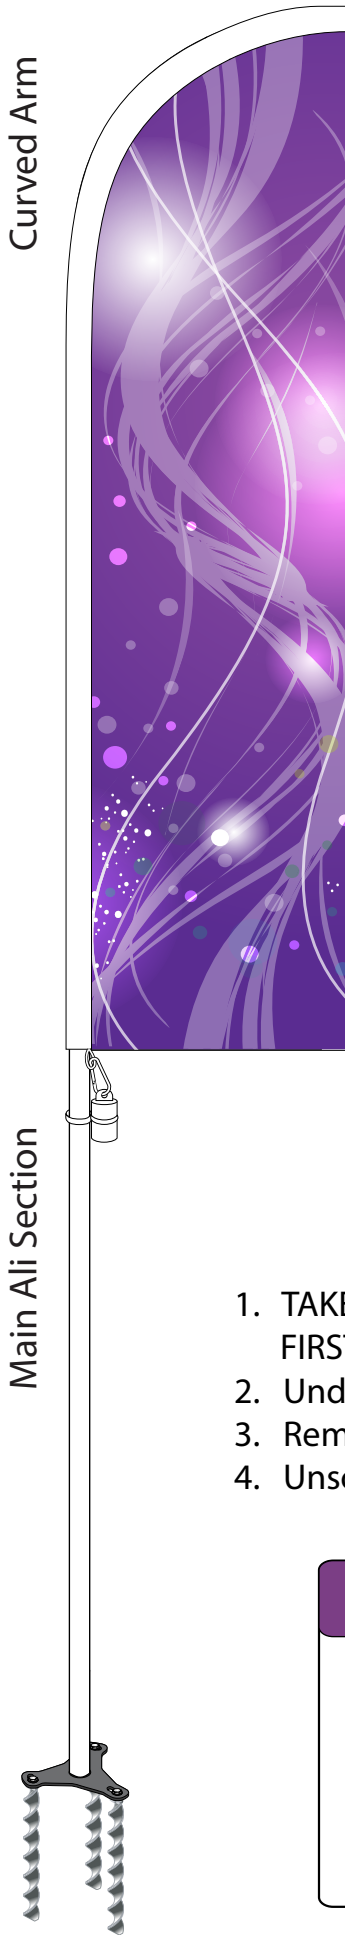

Main Ali Pole
1.5m Curved Arm & Joint
Weight

Baseplate
3 Ground Anchors
(Hammer Cap not
supplied)

CONTENTS

Feather Pole Specifications

Pole Size	4.8m	5.8m
Length of main section	4m	5m
Inside dia of main section	40.39mm	40.39mm
Outside dia of main section	44.45mm	44.45mm
Wall thickness	2mm	2mm
Length of Top Curved Section	0.8m	0.8m
Top Section Outside diameter	28.57mm	28.57mm
Top Section Inside diameter	25.63mm	25.63mm
Pole Weight	4kg	5kg
Max flag size (portrait)	80cm x 320cm	80cm x 420cm
Anchor length	440mm	500mm
Anchor diameter	30mm	40mm
Anchor head size	17mm	22mm
Anchor bolt size	m10	m12
Baseplate 'footprint diameter'	270mm	270mm
Baseplate depth	5mm	5mm
Spigot length	24mm	24mm
Spigot external diameter	40mm	40mm
Overall Baseplate height	25mm	25mm
Total Baseplate Weight	3.7kg	6kg

1. TAKE DOWN POLE. NO NOT ATTEMPT TO REMOVE THE BASEPLATE WITHOUT FIRST TAKING DOWN THE POLE.
2. Undo bolts on top of the baseplate.
3. Remove the baseplate.
4. Unscrew the anchors one by one from the ground using the adjustable wrench.

WARNINGS

Remove pole from baseplate before uninstalling the plate

Re-Usable Ties must never be over tightened

Do not fly flag when wind speed exceeds Force 7 (32mph)

It remains the responsibility of the user to establish the suitability of the product /s for the use/s to which they are put