

- 1, Check contents, the rotating arm kit will come in a separate pack.
- 2, For permanent installation, excavate a foundation, (see table for dimensions). Concrete the socket into place, use a level to check the socket is vertical and sitting on the soil at the bottom of the hole and plumb checking at intervals as you infill the hole. Make sure there is 50mm of socket left above ground. **DO NOT SIT THE POLE ON CONCRETE** (see fig 1a)
- 3, For a temporary installation use a ground auger and pack with sharp sand and soil to secure the ground socket, use a level to check the socket is vertical and plumb checking at intervals as you infill the hole. Make sure there is 50mm of socket left above ground. (see fig 1b)
- 4, Place weight over pole (see fig 3a), mount rotating joint onto top of pole (see fig 3b), screw on finial. (see fig 3c)
- 5, Push rotating arm into joint, ensure button clips into place (see fig 4a), slide top sleeve on flag over the arm. (see fig 4b)
- 6, Secure plastic ties through the eyelets and around the pole. DO NOT OVER-TIGHTEN (see fig 5a). At the bottom of the flag attach the D-ring to the metal clip on the weight. (see fig 5b)
- 7, Assemble the pole sections. Make sure that the joints are fully home.
- 8, Once concrete has set (if applicable), insert the complete flagstaff into the ground socket (Care must be taken to not damage the arm, two persons are recommended for erection process)

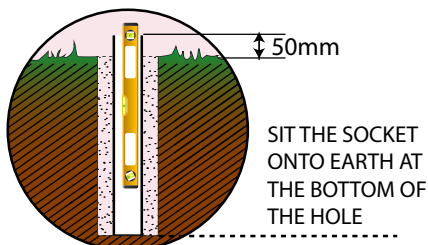


Fig 1a,

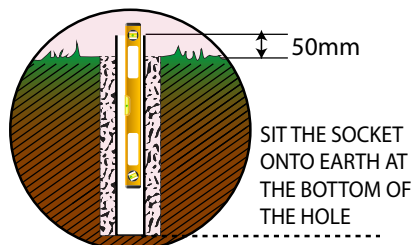


Fig 1b,

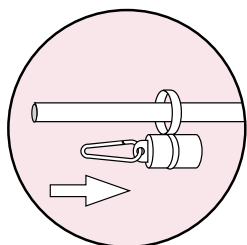


Fig 3a,

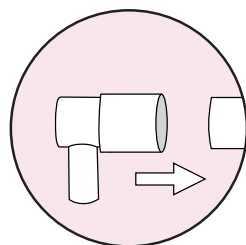


Fig 3b,

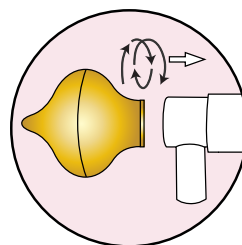


Fig 3c,

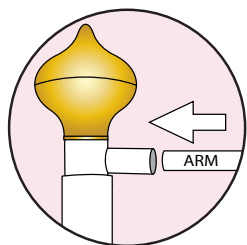


Fig 4a,

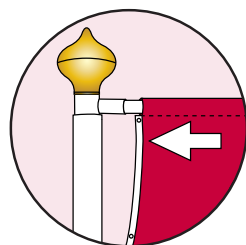


Fig 4b,

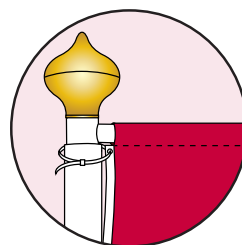


Fig 5a,

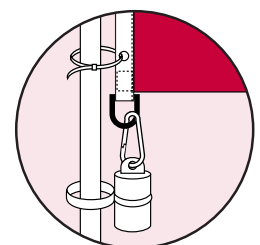



Fig 5b,

# Flagmaster

with Heavy Duty  
Rotating Arm

ASSEMBLY INSTRUCTIONS

October 2018 v6

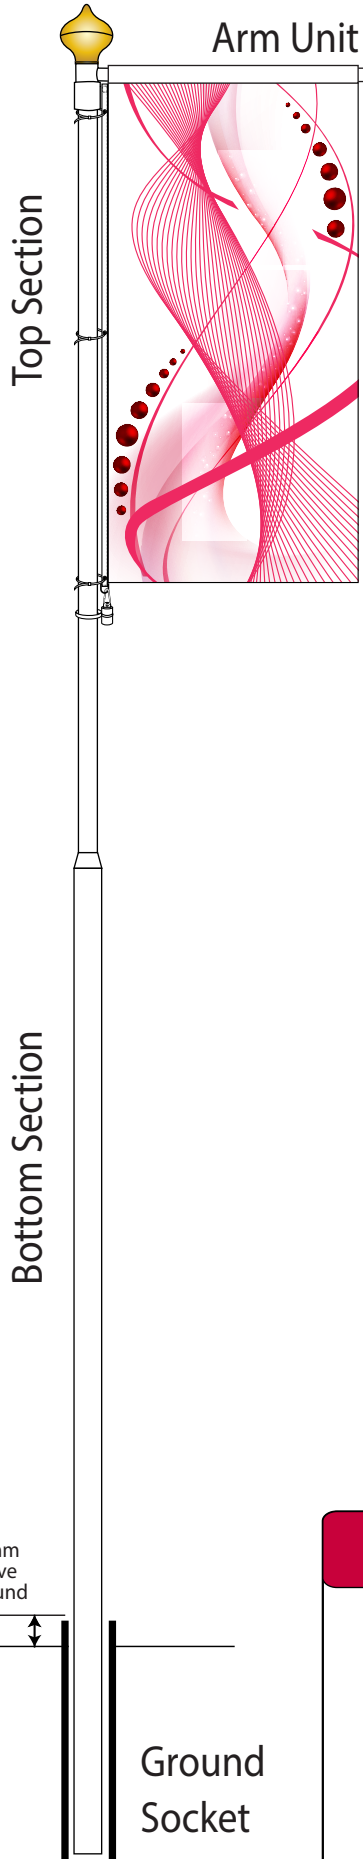

Pack 1:  
2 Flagstaff sections  
& Ground Socket

Pack 2:  
1m Rotating Arm and ties  
Rotating Joint & Finial  
Weight

## CONTENTS

## Flagmaster Pole Specifications

|                                       |                  |
|---------------------------------------|------------------|
| Overall pole length (2 sections)      | <b>8m</b>        |
| Height above Ground                   | 7.25m            |
| Top section diameter                  | 64mm             |
| Length of top section                 | 3.2m             |
| Bottom section diameter               | 75mm             |
| Length of bottom section              | 5m               |
| Ground socket internal diameter       | 77mm             |
| Ground socket external diameter       | 83mm             |
| Length of ground socket               | 850mm            |
| Wall thickness                        | 2.5mm            |
| Packed Size                           | 5.3 x 0.1 x 0.1m |
| Packed weight                         | 18kg             |
| Foundation square*                    | 500mm            |
| Foundation depth*                     | 800mm            |
| Arm length                            | 1.2m             |
| Arm Outside diameter                  | 22mm             |
| Arm Inside diameter                   | 18mm             |
| Wall thickness                        | 2.25mm           |
| Weight internal diameter              | 85mm             |
| Packed size                           | 1.2 x 0.1 x 0.3m |
| Packed Weight                         | 3kg              |
| Max flag size (portrait)              | 100cm x 400cm    |
| Max flag size (portrait double sided) | 100cm x 250cm    |

\*These are suggested dimensions only, actual measurements will depend on ground conditions

## WARNINGS

**BEFORE INSTALLATION, CHECK FOR UNDERGROUND SERVICES**

**Do not fly flag when wind speed exceeds Force 7 (32mph)**

**It remains the responsibility of the user to establish the suitability of the product /s for the use/s to which they are put**

**Re-Usable Ties must never be over tightened**