

# Forecourt Pole

with Rotating Arm  
& Event Basplate

## ASSEMBLY INSTRUCTIONS

October 2018 v4

1. Check contents. Place the baseplate in required position on the grass making sure that it is far enough away from any obstructions for the rotating arm.
2. Mark the first hole with a screwdriver/marker. (Fig 1) Move the baseplate out of the way and push the anchor into the ground where marked.
3. Place the hammer cap over the anchor before hammering. (Fig 2)
4. Hammer the anchor into the ground, (Fig 3). When it is at ground level remove the cap.
5. Reposition the baseplate over the existing anchor, mark the position of the next anchor.
6. Repeat steps 2 to 5 until all three anchors have been installed into the ground.
7. Place the baseplate over the anchors to check position of anchors to the holes on the baseplate. If required, tap the anchor slightly to bring it back in line with the hole on the baseplate. (Fig 4)
8. Check baseplate to make sure it is level. (Fig 5) Knock the relevant anchors further into the ground if necessary to bring the plate level. (Remembering to use the hammer cap to avoid damaging the anchor top)
10. Insert the bolts over the baseplate into the top of the anchors, and tighten. (Fig 6)
11. Place weight over pole (Fig 7), mount the rotating joint onto top of pole, push on finial and push rotating arm into joint, ensure the button clips into place (Fig 8)
12. Slide top sleeve on flag over the arm. Secure plastic ties through the eyelets and around the pole. (Fig 9) DO NOT OVER-TIGHTEN.
13. At the bottom of the flag attach the D-ring to the metal clip on the weight. (Fig 10)
14. Mount the pole onto the wedge ensuring the pole covers the full length of the spigot. (Make sure the arm and flag can rotate freely clear of obstacles) (Fig 11)

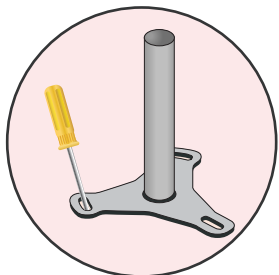


Fig 1.

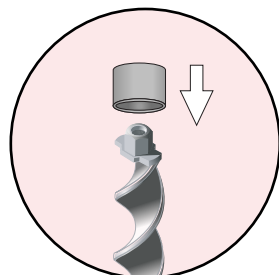


Fig 2.

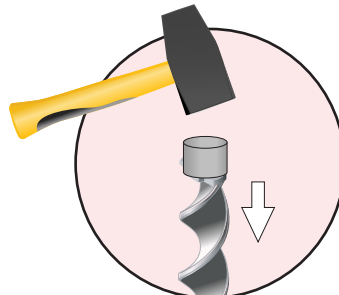


Fig 3.

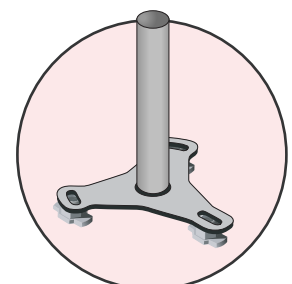


Fig 4.

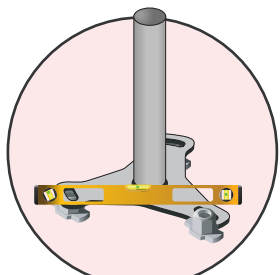


Fig 5.

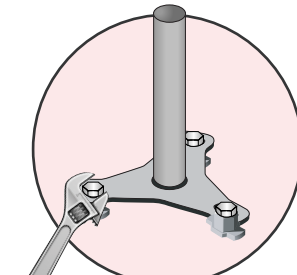


Fig 6.

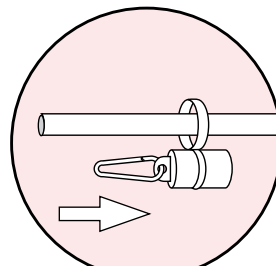


Fig 7.

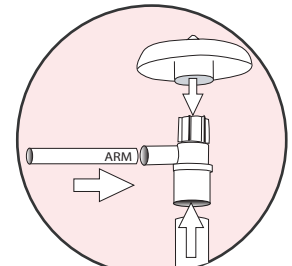


Fig 8.

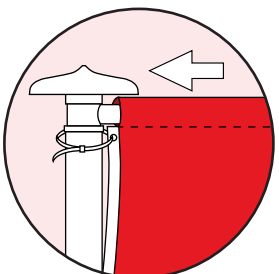


Fig 9.

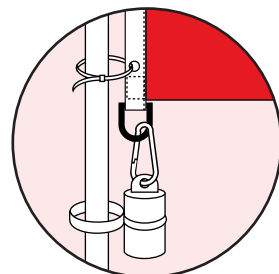


Fig 10.


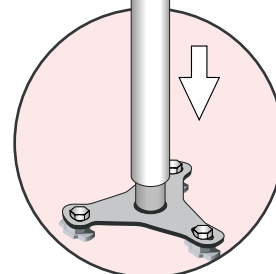


Fig 11.

# Forecourt Pole

ASSEMBLY INSTRUCTIONS

October 2018 v4

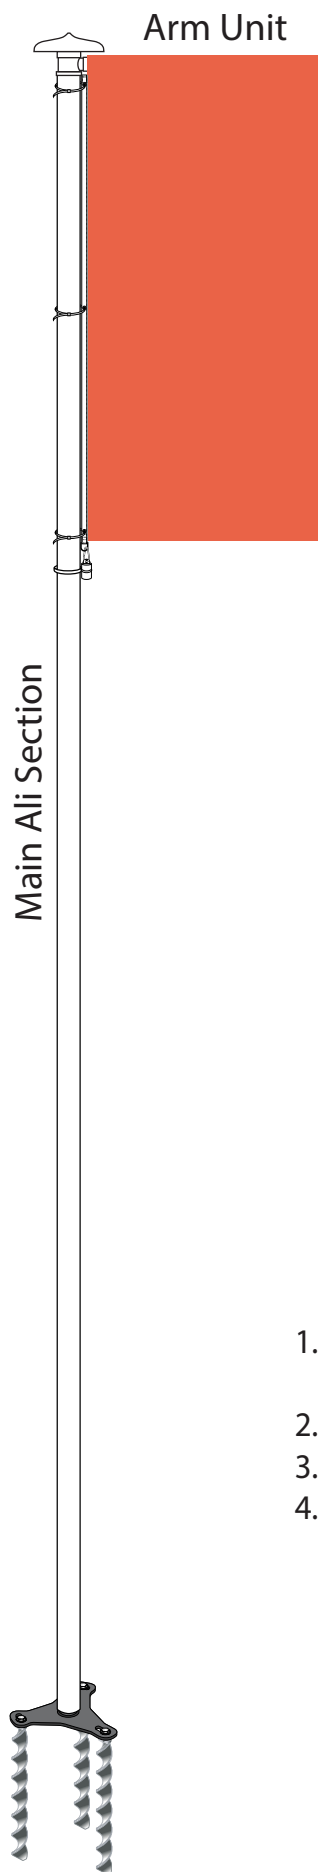

Main Ali Pole	Baseplate
1m Rotating Arm and ties	3 Ground Anchors
Rotating Joint & Finial	(Hammer Cap not supplied)
Weight	

CONTENTS

## Forecourt Pole Specifications

Pole Size	4m	5m
Length of main section	4m	5m
Inside dia of main section	40.39mm	40.39mm
Outside dia of main section	44.45mm	44.45mm
Wall thickness	2mm	2mm
Weight internal diameter	61mm	61mm
Arm length	1m	1m
Arm Outside diameter	20.4mm	20.4mm
Arm Inside diameter	17.96mm	17.96mm
Packed Weight	4kg	5kg
Max flag size (portrait)	100cm x 250cm	100cm x 250cm
Max flag size (landscape)	180cm x 120cm	180cm x 120cm
Anchor length	440mm	500mm
Anchor diameter	30mm	40mm
Anchor head size	17mm	22mm
Anchor bolt size	m10	m12
Baseplate 'footprint diameter'	270mm	270mm
Baseplate depth	5mm	5mm
Spigot length	24mm	24mm
Spigot external diameter	40mm	40mm
Overall Baseplate height	25mm	25mm
Total Baseplate kit weight	3.7kg	6kg

1. TAKE DOWN POLE. NO NOT ATTEMPT TO REMOVE THE BASEPLATE WITHOUT FIRST TAKING DOWN THE POLE.
2. Undo bolts on top of the baseplate.
3. Remove the baseplate.
4. Unscrew the anchors one by one from the ground using the adjustable wrench.

## WARNINGS

**Remove pole from baseplate before uninstalling the plate**

**Re-Usable Ties must never be over tightened**

**Do not fly flag when wind speed exceeds Force 7 (32mph)**

**It remains the responsibility of the user to establish the suitability of the product /s for the use/s to which they are put**